

SINGSATION™

STAR BURST

ALL-IN-ONE
PARTY SYSTEM

QUICK START GUIDE

Tour of the Singstation Star Burst

Star Burst Right Side

Bluetooth indicator shows the Bluetooth status of the Singstation Star Burst (solid blue is connected; fast flashing blue means pairing, and slow flashing blue means not connected). This indicator turns solid white when **AUX IN** is connected.

POWER/PAIR button turns the Star Burst on/off (press and hold). A short double-press when the Star Burst is on puts it into pairing mode.

MODE button controls the speaker's multi-mode lighting. Press to cycle through the light modes. Press and hold to turn lighting off.

COLOR button changes the color of the light in light modes where you can select color.


SOUND FX button plays one of the available sound effects. Press once to play the current effect. Press and hold to change effects.

VOICE FX button cycles through the available voice effects. **MIC/FX VOL + and - buttons** adjust the volume of the **MIC 1** and **MIC 2** microphones.

Star Burst Left Side


MIC 1 and MIC 2 jacks let you connect up to two microphones to use with the speaker, for karaoke or announcements.

AUX IN jack lets you connect to an external audio device with a 3.5mm audio cable. The speaker switches automatically to this input (and turns Bluetooth off) when you insert the cable.

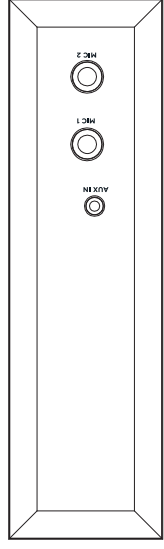

Bluetooth indicator

Back

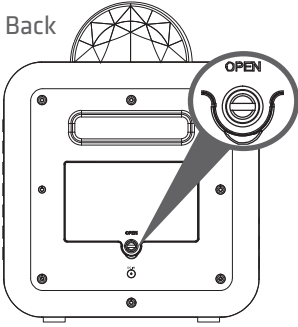


To power using AA batteries: Unscrew and remove the battery compartment cover on the back of the speaker. Insert eight (8) AA batteries (not included) into the speaker following the polarity ("+" and "-") as diagrammed inside the battery compartment. Replace the battery compartment cover on the back of the speaker and screw it back in place.

Step 3: Turn on


Press and hold the **POWER/PAIR** button on the right side of the Star Burst to turn it on. The Star Burst plays its startup sound and the indicator above the **POWER/PAIR** button starts blinking slowly.

After 15–30 seconds, the Singsation Star Burst announces “Pairing” and goes to Bluetooth pairing mode to set up with your Bluetooth device. The indicator starts blinking faster.

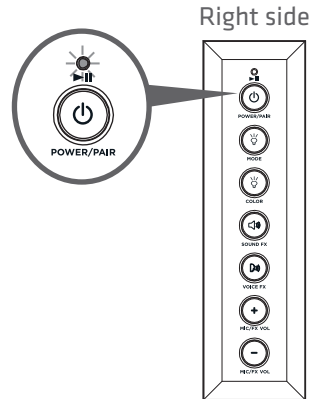

Step 5: Sing along!

The Singstation Star Burst comes with 2 microphones you can use to sing along or make announcements!

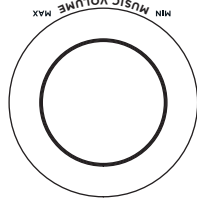


Top

TOO QUIET?

Make sure the volume of your Bluetooth device is turned all the way up (or at least to 75%).



Right side

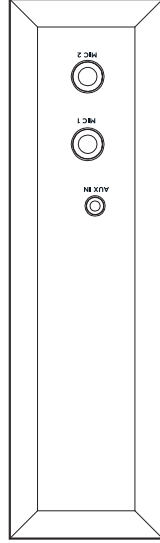

Left side

To sing along: Plug one or both of the provided microphones into the **MIC 1** and **MIC 2** jacks on the left side of the Singstation Star Burst. Start playing music on your Bluetooth device and start singing!
IMPORTANT: Make sure the volume of your Bluetooth device is turned all the way up (or at least to 75%).

To adjust the volume of the microphones: Use the **MIC/FX VOL+** and **MIC/FX VOL-** buttons on the right side of the Star Burst.

To adjust the volume of your music: Use the **MUSIC VOLUME** knob on the top of Star Burst, or use the volume controls on your Bluetooth device.
IMPORTANT: Make sure the volume of your Bluetooth device is turned all the way up (or at least to 75%).

Fun with Voice and Sound Effects

To use sound effects: Press the **SOUND FX** button on the Star Burst. A single press plays the same effect again. Press and hold the button or remote key to change effects.

To change voice effects: Press the **VOICE FX** button on the Star Burst. Keep pressing to try all the effects!


Step 4: Pair + Connect

Enable Bluetooth on your smartphone or other Bluetooth device.



Make sure the indicator above the Star Burst's **POWER/PAIR** button is blinking rapidly. (If it isn't, give a short double-press on the **POWER/PAIR** button. The Singstation Star Burst announces "Pairing.")

If you've previously paired your phone or other Bluetooth device with the Singstation Star Burst, it will automatically attempt to reconnect to that device when you switch it on. If you want to pair to a new device, give a short double-press to the **POWER/PAIR** button. The Singstation Star Burst announces "Pairing" and its indicator starts blinking.

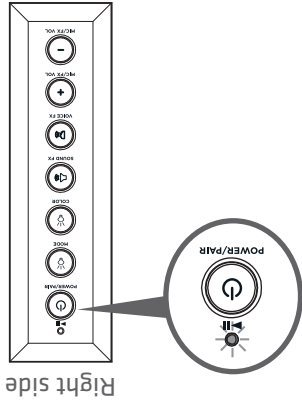

Choose **SINGSTATION STAR BURST** from the pairing options on your Bluetooth device. (If it's not in the list, choose "Scan" from your device's Bluetooth menu.)

The Singstation Star Burst announces "Device Connected" when it's finished pairing and connecting to your Bluetooth device. The indicator above the **POWER/PAIR** button turns solid blue.

Note: The process of enabling Bluetooth and connecting varies from device to device. See your device's owners manual for more information and specific instructions.

Bluetooth Wireless Connection Tips

- Make sure the Bluetooth capability of your device is turned on.
- Make sure there's nothing plugged into the Singstation Star Burst's **AUX IN** jack when you're trying to use Bluetooth.
- The Bluetooth wireless connection works up to a range of roughly 33 feet (10 meters). This range may vary, however, based on other factors, such as room layout, wall material, obstacles, your device's Bluetooth performance, etc. If you're having problems connecting to the speaker, move closer to it.
- If your device asks you for a password to connect, use "0000".
- Make sure the volume of your Bluetooth device is turned all the way up (or at least to 75%).

Using Light Effects


The **MODE** and **COLOR** buttons on the right side of the Star Burst give you control over its built-in dynamic lighting. The Star Burst offers 10 different light effects, with color variations for many.

To cycle through light effects: Press the **MODE** button on the Star Burst repeatedly.

To change the color of a light effect: Press the **COLOR** button on the Star Burst repeatedly. **Note:** Not every light effect offers color variations.

To turn light effects off: Press and hold the **MODE** button on the Star Burst.

Right side

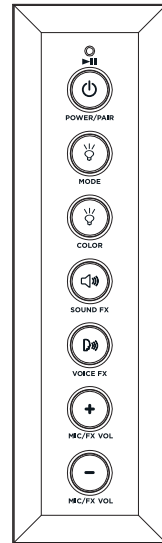

Demo Mode


The Star Burst has a demo mode that shows off all of its lighting options.

To activate/deactivate demo mode: Make sure the Star Burst is on and plugged in (not running on battery power). Then press and hold the **COLOR** button for 10 seconds.

Step 1: Unpack

Make sure the following items came in this package:


- ACCESSORIES:**
- + AC Power Adapter
- + 1 Microphone

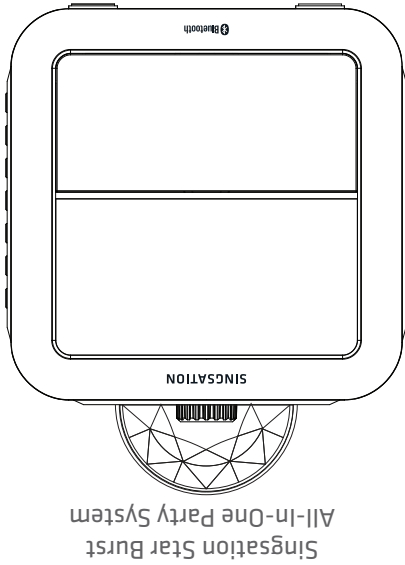

Step 2: Power the speaker

There are two options to power your Singstation Star Burst: using the included AC power adapter or using 8 AA batteries (not included).

To power using the AC power adapter: Attach one end of the AC adapter to the **DC IN** jack on the back of the Singstation Star Burst. Plug the other end of the adapter into a working outlet or surge protector.

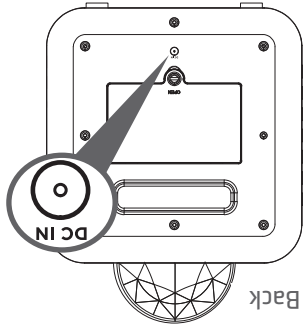

Star Burst Top and Back (Not Shown)

MUSIC VOLUME dial (top) adjusts the volume of the music playing.

IMPORTANT: *Make sure the volume of your Bluetooth device is turned all the way up (or at least to 75%).*

DC IN jack (back) connects to the provided power cable.

Battery compartment lets you power the Star Burst with 8 AA batteries (not included).

90-Day Limited Warranty

Vox Accessories Corporation (the "Company") warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 90 days from the date of original purchase, such defect(s) will be repaired or replaced with new or reconditioned product (at the Company's option) without charge for parts and repair labor.

To obtain repair or replacement within the terms of the warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to an approved warranty station. For the location of the nearest warranty station to you, call toll-free to our control office: 1-800-645-4994.

This Warranty is not transferable and does not cover product purchased, serviced or used outside the United States or Canada. The warranty does not extend to the elimination of externally generated static or noise, to costs incurred for the installation, removal or reinstallation of the product. The warranty does not apply to any product or part thereof which, in the opinion of the company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident or exposure to moisture. This warranty does not apply to damage caused by an AC adapter not provided with the product, or by leaving non-rechargeable batteries in the product while plugged into an AC outlet.

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO DURATION OF THIS WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER, INCLUDING ANY IMPLIED WARRANTY, MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM THE DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES WHATSOEVER. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states/provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state/province to state/province.